



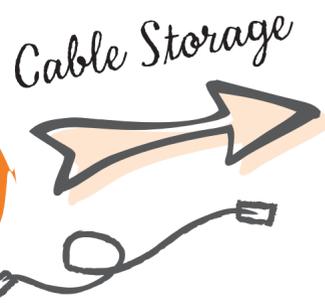

Installation and Setup Instructions

FAS2552 Systems

Prepare for Installation

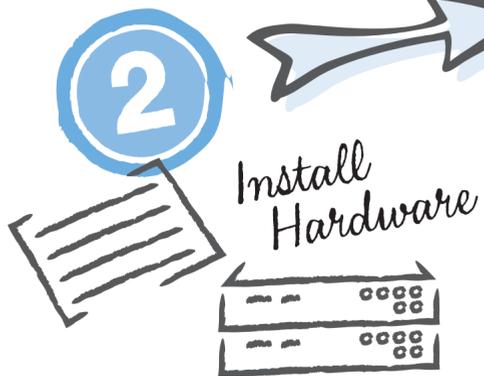

Complete Configuration

Complete System Setup



1


Prepare for installation



In the box:



Configuration worksheet

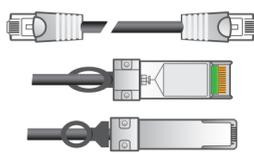

Starter network, storage, and 10 GbE cables



Power cables



Serial cable not needed for this configuration



You provide:



Screwdriver



Rack space - 2U



Additional network cables
For connecting your storage to your network switch and Microsoft® Windows® client



Microsoft Windows client
Runs the software to configure your storage system



Download:




- **System Setup Software:** http://support.netapp.com/NOW/public/system_setup/
- **OnCommand System Manager:** <http://support.netapp.com/NOW/cgi-bin/software/>




210-06577+A0

FRONT VIEW OF SYSTEM

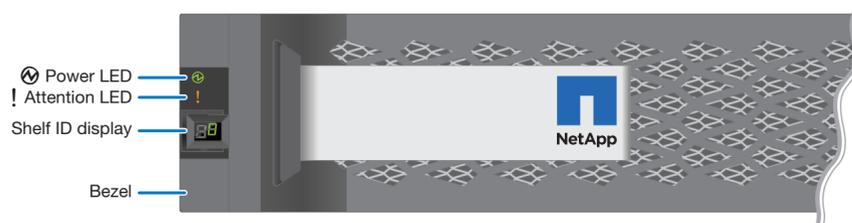


BACK VIEW OF SYSTEM

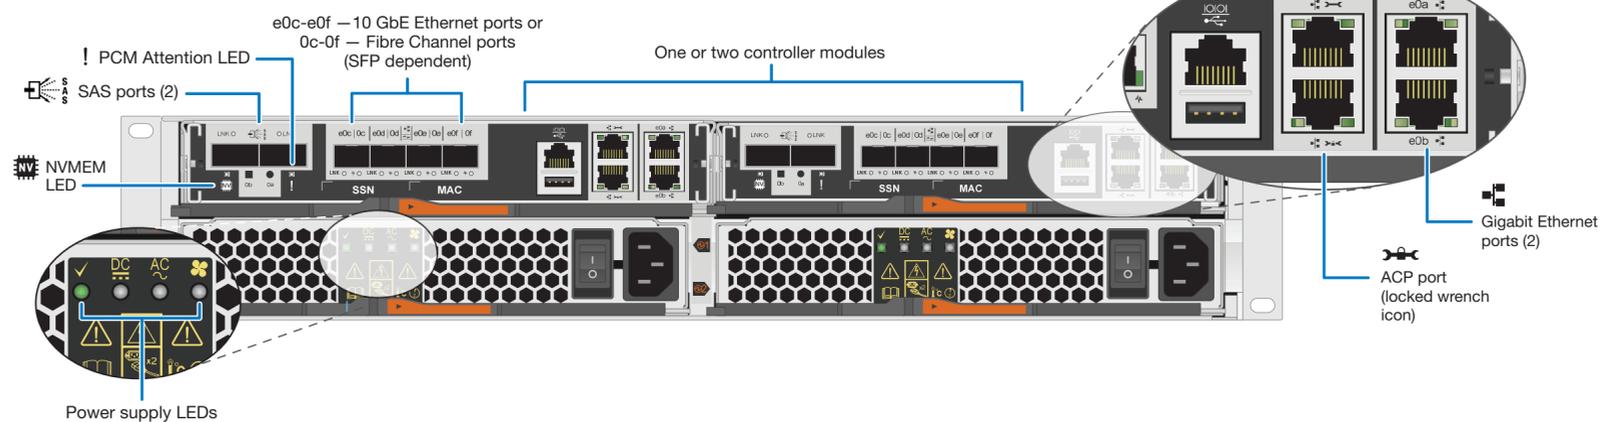

1 Install system


- Rack the system.
Rail kit: follow instructions in rail kit. **OR System cabinet:** install in system cabinet.
- Place the bezel over the front of the system.

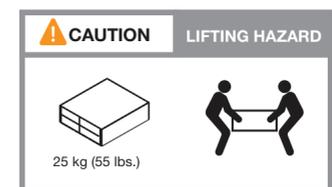


2 Cable controller for 7-Mode Data ONTAP (option A), switched clustered Data ONTAP (option B) or for switchless clustered Data ONTAP (option C)

- 1 Attach cable management arms.
- 2 10 GbE cables
Connect port e0c to the data switch.
NOTE: Port e0c is required; other ports are available if needed.
- 3 Network cables
Connect the wrench port to the management or subnet switch.
- B4** 10 GbE cables
For option B only
Connect port e0e | 0e and port e0f | 0f to the cluster switch.
- C4** 10 GbE cables
For option C only
Connect port e0e | 0e to port e0e | 0e and e0f | 0f to e0f | 0f.
- 5 Strap the cables to the cable management arms.


A 7-Mode

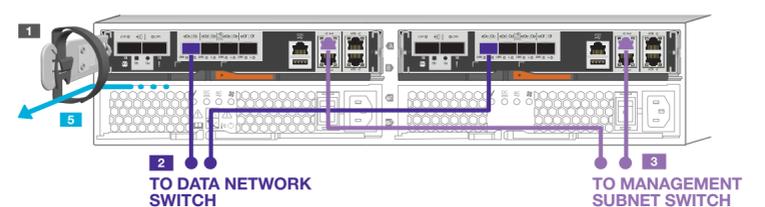

B Switched clustered Data ONTAP

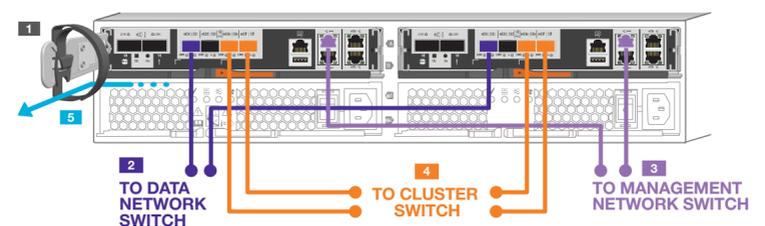


C Switchless clustered Data ONTAP

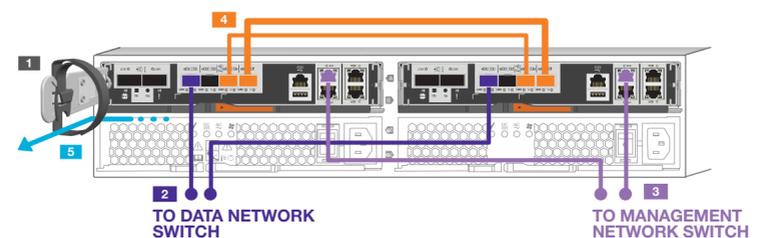

See your network administrator for help connecting to your switch.

3 Connect both power cords

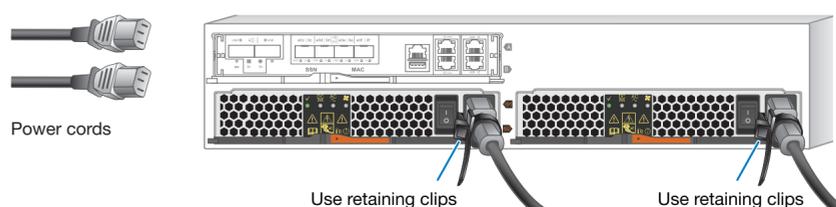

Both power cords **MUST** be used for all units.

DO NOT power on system at this point.

3


Cable storage (Choose option A, B, or C below)




A

Cabling FAS2552 systems with NO external storage

No additional cabling required for a single controller.

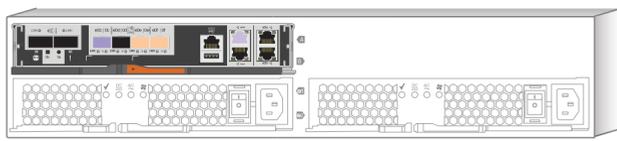

Single controller model

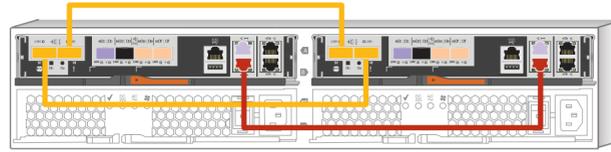


Double controller model

- 1 Storage cables
Connect SAS ports
- 2 Network cables
Connect ACP ports


STOP HERE. If you have NO external storage, skip to **4**.

B

Cabling FAS2552 systems WITH external storage DS4246 disk shelves

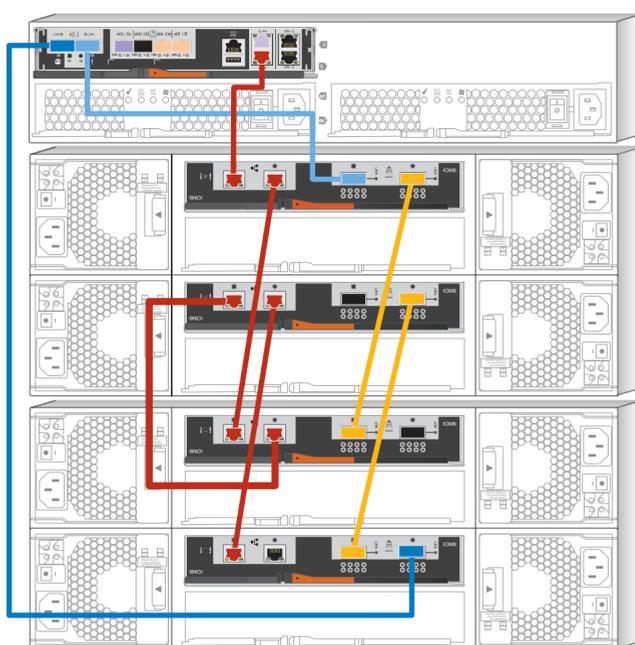

Single controller model

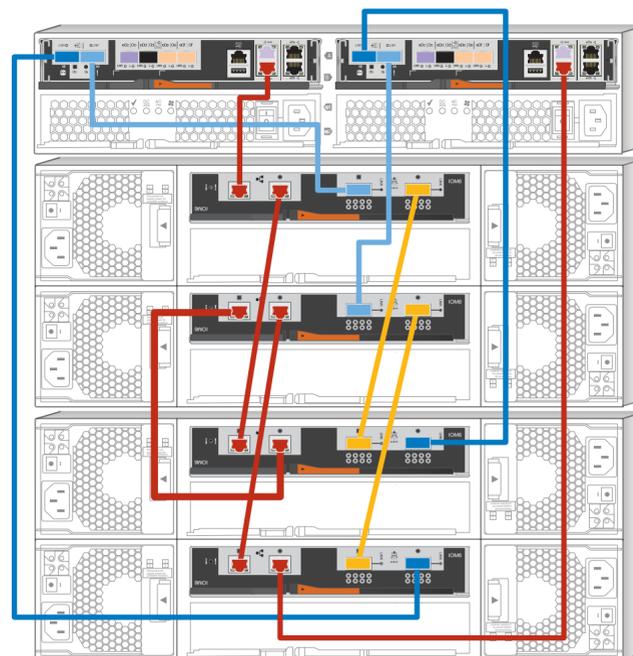


Double controller model


- 1 2 3 Storage cables
 - 1 Daisy chain SAS ports
 - 2 Connect first SAS ports
 - 3 Connect last SAS ports
- 4 Network cables
Connect ACP ports on controllers to the disk shelves

C

Cabling FAS2552 systems WITH external storage DS2246 disk shelves

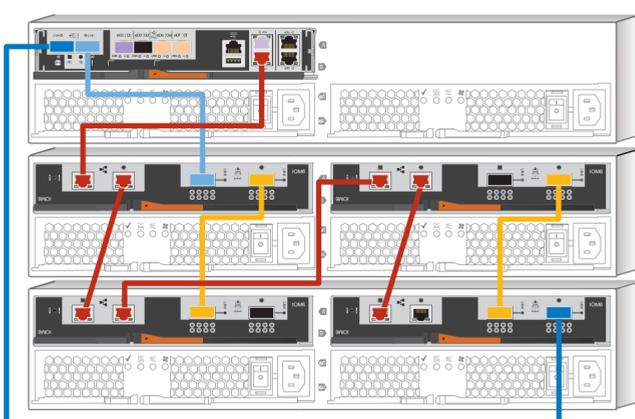

Single controller model

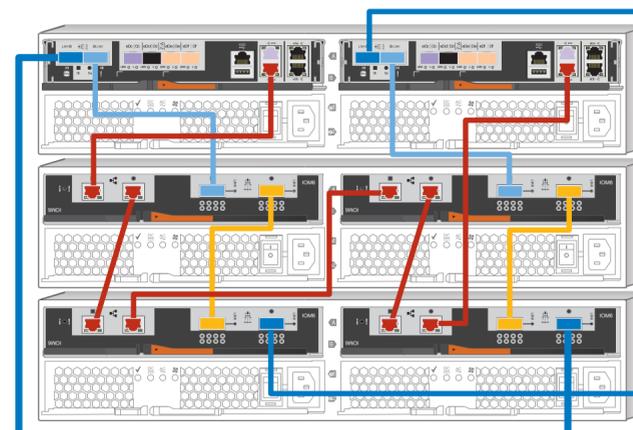

Double controller model

- 1 2 3 Storage cables
 - 1 Daisy chain SAS ports
 - 2 Connect first SAS ports
 - 3 Connect last SAS ports
- 4 Network cables
Connect ACP ports on controllers to the disk shelves

1 Complete configuration worksheet


Available in the box or at http://support.netapp.com/NOW/public/system_setup/



2 Cable Windows client to the same network as your controllers

3 Power on all external storage ONLY

4 Install System Setup* software on the Windows client

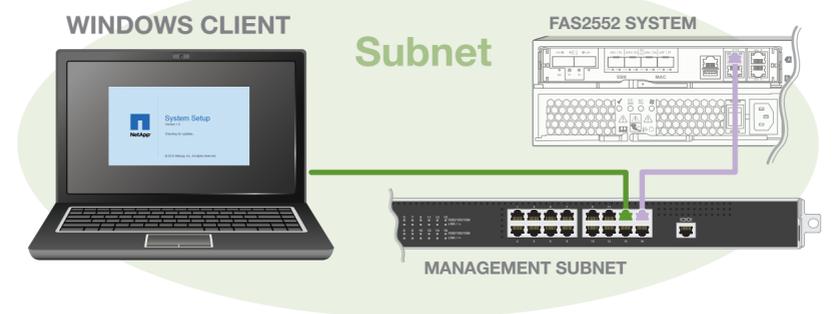

5 Start System Setup software

- the system.
- When directed, power on your system (or repower).
- Wait for discover to complete. ⌚ Up to 8 minutes.
- Enter the values from the configuration worksheet into System Setup.*



*If you cannot use System Setup, see the Data ONTAP Software Setup Guide

1 Register at support.netapp.com

- Create an account.
- Register your system.
- Get your license keys.


2 Download and run Config Advisor

From http://support.netapp.com/NOW/download/tools/config_advisor/

3 Download OnCommand System Manager

From <http://support.netapp.com/NOW/cgi-bin/software/>

- Provision more storage.
- Configure other protocols, data protection, and AutoSupport.
- Set up Service Processor and Remote Support Agent.

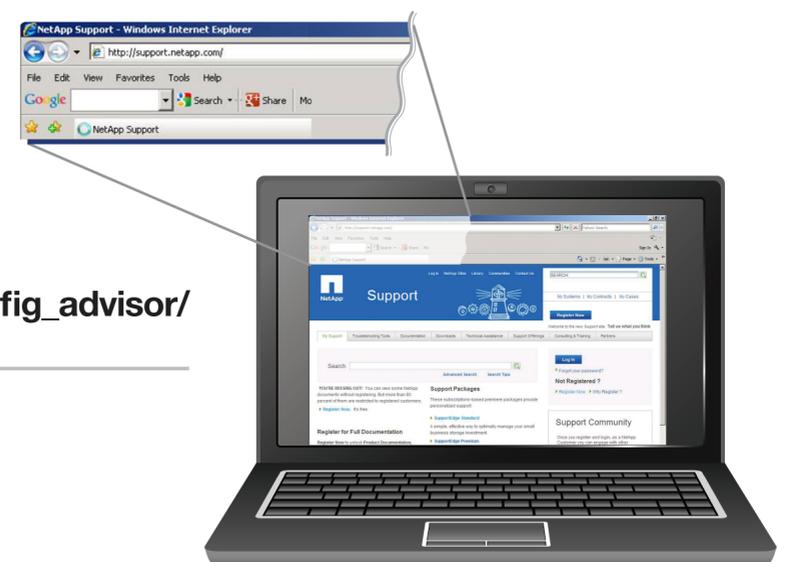

HELPFUL LINKS
Visit the NetApp web site for more information.



- **System Setup information:** http://support.netapp.com/NOW/public/system_setup/
- **Controller and configuration examples; Universal SAS and ACP Cabling Guide:** https://library.netapp.com/ecm/ecm_download_file/ECMM1280392
- **OnCommand System Manager documentation set:** <http://support.netapp.com/documentation/productlibrary/index.html?productID=61372>
- **Data ONTAP 8 library:** <http://support.netapp.com/documentation/productlibrary/index.html?productID=30092>
- **Licenses:** <http://support.netapp.com/eservice/agree.do?moduleName=PROTOCOL>